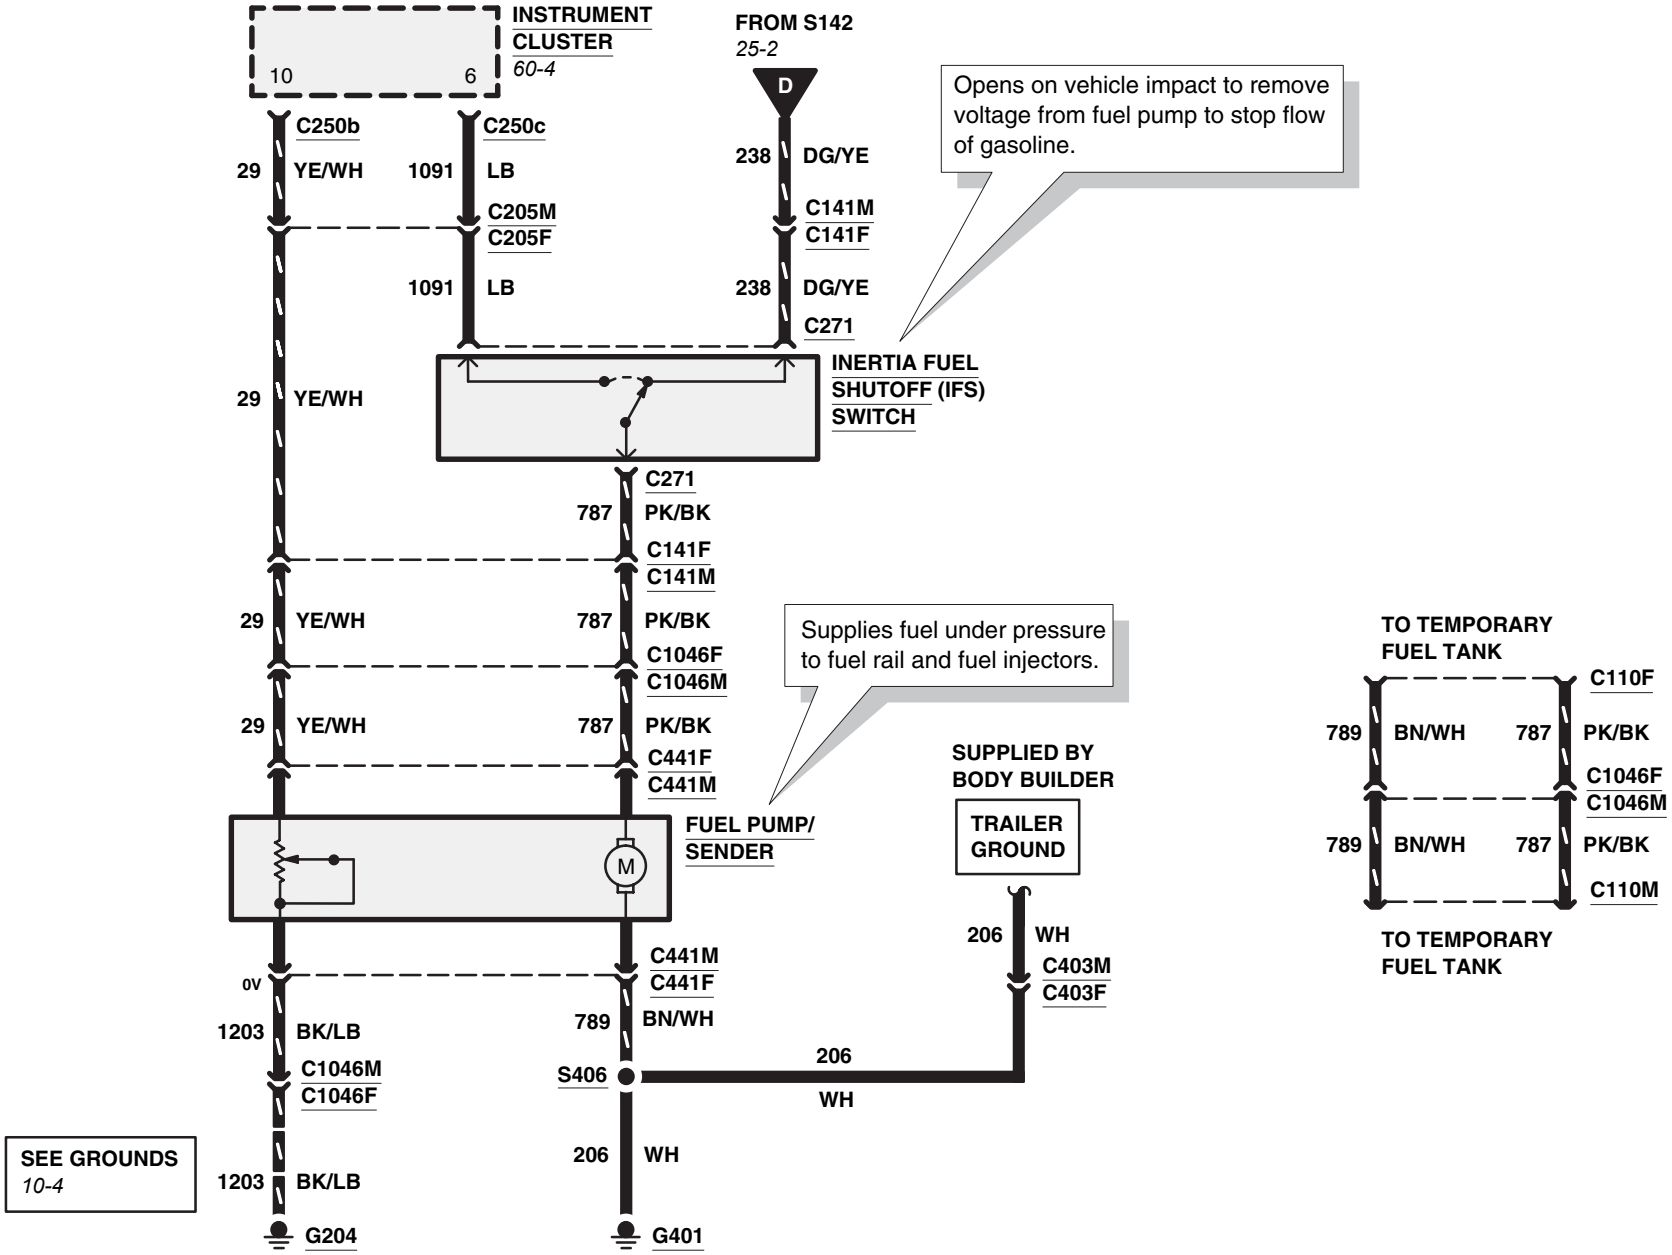
INSTRUMENT CLUSTER
60-4
10
6
FROM S142
25-2
D
C250b
C250c
29
YE/WH
1091
LB
238
DG/YE
C205M
C205F
C141M
C141F
1091
LB
238
DG/YE
C271
Opens on vehicle impact to remove voltage from fuel pump to stop flow of gasoline.
INERTIA FUEL SHUTOFF (IFS) SWITCH
29
YE/WH
C271
787
PK/BK
C141F
C141M
29
YE/WH
787
PK/BK
C1046F
C1046M
Supplies fuel under pressure to fuel rail and fuel injectors.
29
YE/WH
787
PK/BK
C441F
C441M
FUEL PUMP/ SENDER
M
SUPPLIED BY BODY BUILDER
TRAILER GROUND
206
WH
C403M
C403F
0V
C441M
C441F
1203
BK/LB
789
BN/WH
C1046M
C1046F
S406
206
WH
SEE GROUNDS
10-4
1203
BK/LB
206
WH
G204
G401
TO TEMPORARY FUEL TANK
C110F
789
BN/WH
787
PK/BK
C1046F
C1046M
789
BN/WH
787
PK/BK
C110M
TO TEMPORARY FUEL TANK