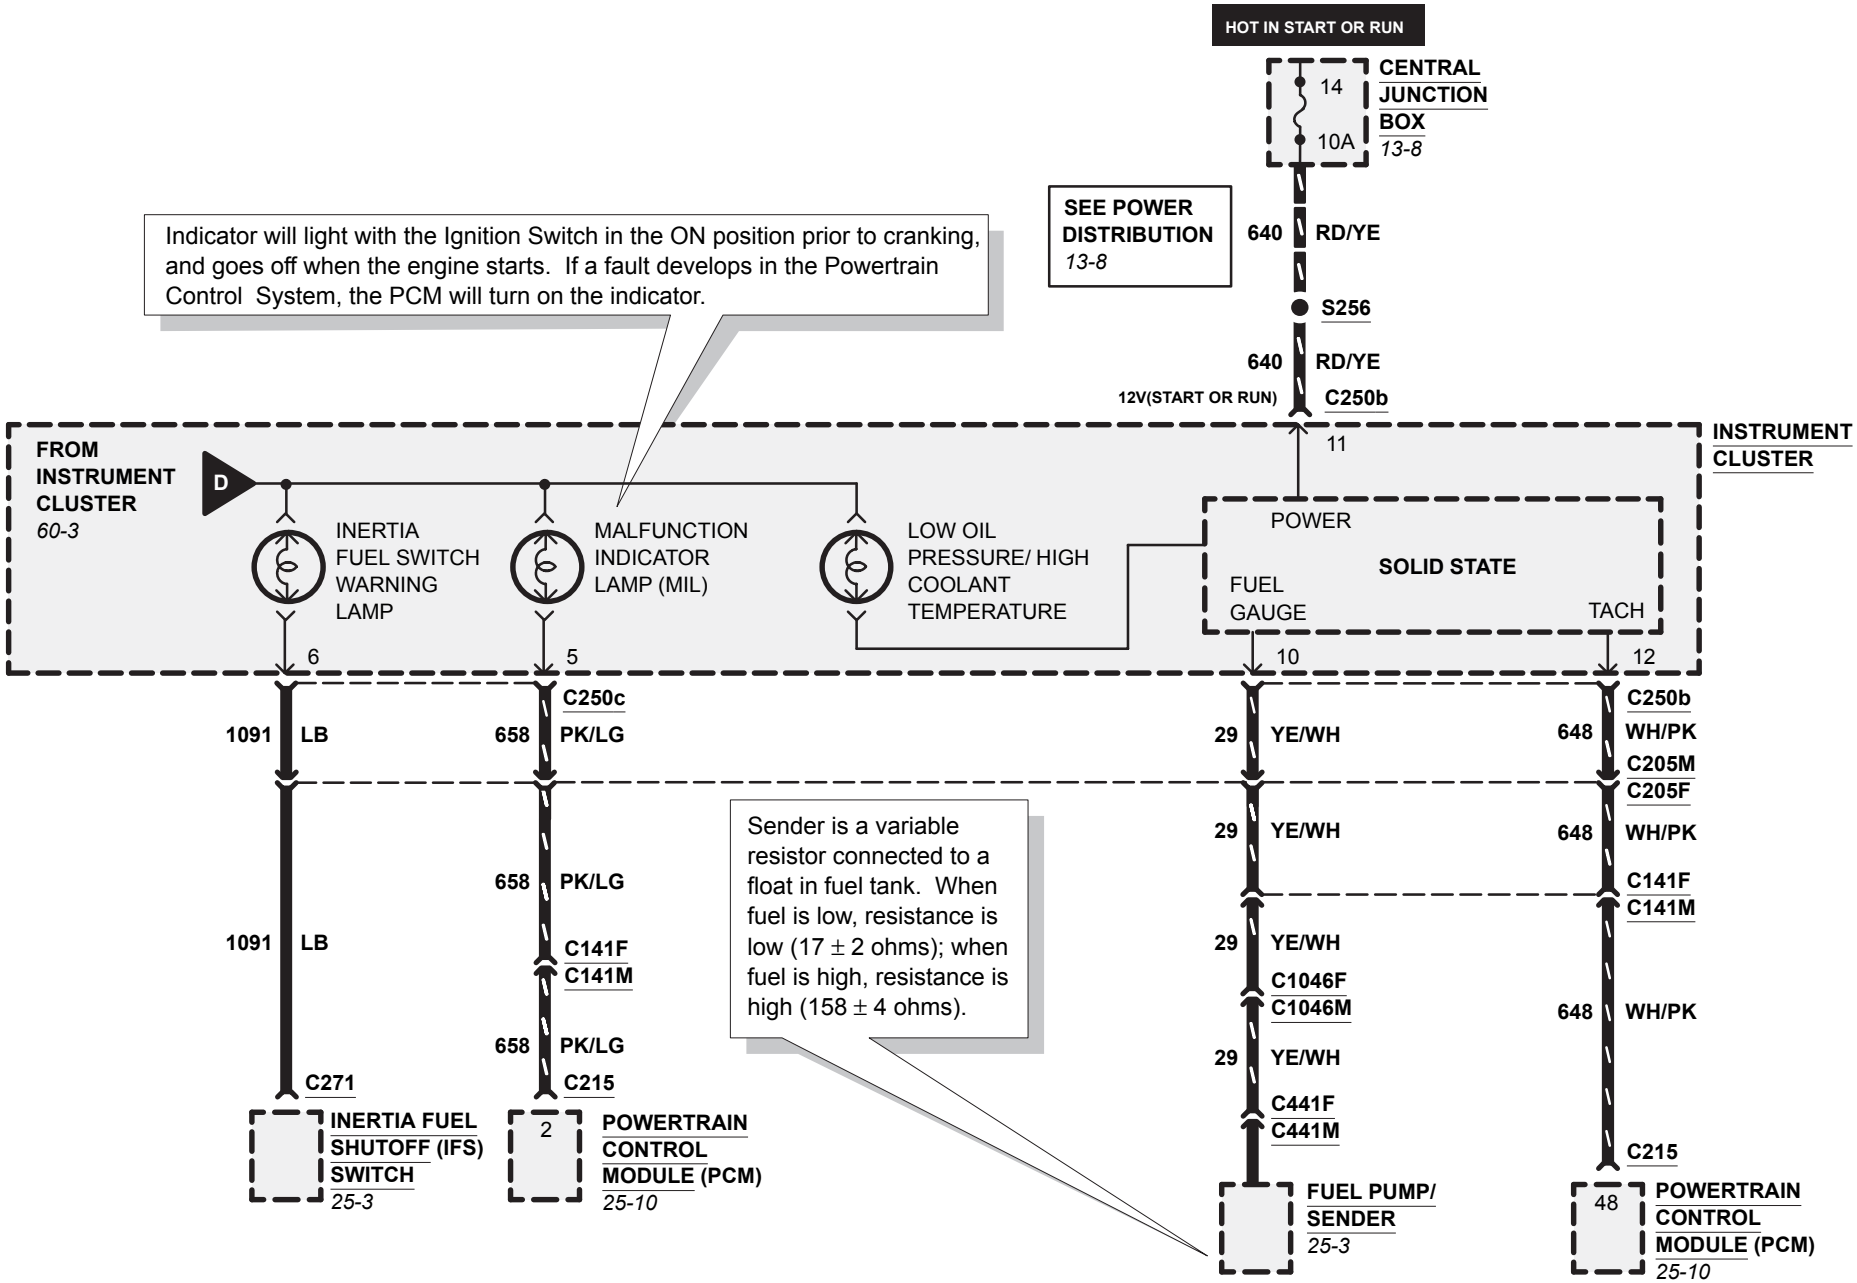
HOT IN START OR RUN
CENTRAL JUNCTION BOX
13-8
14
10A
SEE POWER DISTRIBUTION
13-8
640 RD/YE
S256
640 RD/YE
12V(START OR RUN)
C250b
11
INSTRUMENT CLUSTER
Indicator will light with the Ignition Switch in the ON position prior to cranking, and goes off when the engine starts. If a fault develops in the Powertrain Control System, the PCM will turn on the indicator.
FROM INSTRUMENT CLUSTER
60-3
D
INERTIA FUEL SWITCH WARNING LAMP
MALFUNCTION INDICATOR LAMP (MIL)
LOW OIL PRESSURE/ HIGH COOLANT TEMPERATURE
POWER
SOLID STATE
FUEL GAUGE
TACH
6
5
10
12
1091 LB
C250c
658 PK/LG
29 YE/WH
C250b
648 WH/PK
C205M
C205F
29 YE/WH
648 WH/PK
C141F
C141M
658 PK/LG
1091 LB
C141F
C141M
29 YE/WH
C1046F
C1046M
648 WH/PK
658 PK/LG
29 YE/WH
C441F
C441M
C271
C215
C215
INERTIA FUEL SHUTOFF (IFS) SWITCH
25-3
2
POWERTRAIN CONTROL MODULE (PCM)
25-10
Sender is a variable resistor connected to a float in fuel tank. When fuel is low, resistance is low (17 ± 2 ohms); when fuel is high, resistance is high (158 ± 4 ohms).
FUEL PUMP/ SENDER
25-3
48
POWERTRAIN CONTROL MODULE (PCM)
25-10